# LiFePO4 Battery Charger for Solar-Powered Systems CN3158

## **General Description:**

The CN3158 is a complete constant-current /constant voltage linear charger for single cell LiFePO4 batteries. The device contains an on-chip power MOSFET and eliminates the need for the external sense resistor and blocking diode. An on-chip adaptive cell can adjust charging current automatically based on the output capability of input power supply, so CN3158 is ideally suited for solar powered system. Thermal feedback regulates the charge current to limit the die temperature during high power operation or high ambient temperature. The regulation voltage is internally fixed at 3.63V with 1% accuracy, it can also be adjusted upwards with an external resistor. The charge current can be set externally with a single resistor. When the input supply is removed, the CN3158 automatically enters a low power sleep mode, dropping the battery drain current to less than 3uA. Other features include undervoltage lockout, automatic recharge, battery temperature sensing and charging/termination indicator.

The CN3158 is available in a thermally enhanced 8-pin SOP package.


### **Applications:**

- Solar Powered System
- Flashlight and Lighting
- Portable Devices
- Chargers


### **Features:**

- Automatic charge current adjustment based on the output capability of input power supply
- Suitable for Solar-Powered System
- On-chip Power MOSFET
- No external Blocking Diode or Current Sense Resistors Required
- Preset 3.63V regulation voltage with 1% accuracy, upwards adjustable with a resistor
- Precharge Conditioning for Reviving Deeply Discharged Cells and Minimizing Heat Dissipation During Initial Stage of Charge
- Continuous Charge Current Up to 1A
- Constant-Current/Constant-Voltage Operation with Thermal Regulation to Maximize Charge Rate Without Risk of Overheating
- Automatic Low-Power Sleep Mode When Input Supply Voltage is Removed
- Status Indication for LEDs or uP Interface
- C/10 Charge Termination
- Automatic Recharge
- Battery Temperature Sensing
- Available in eSOP8 Package
- Pb-free, rohs-Compliant and Halogen Free

### **Pin Assignment**

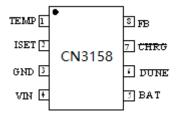

## **Typical Application Circuit**

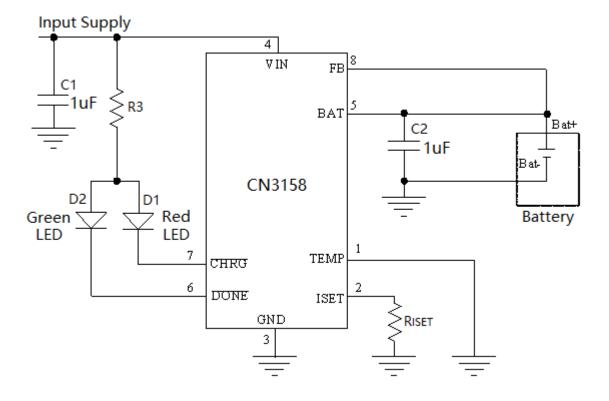



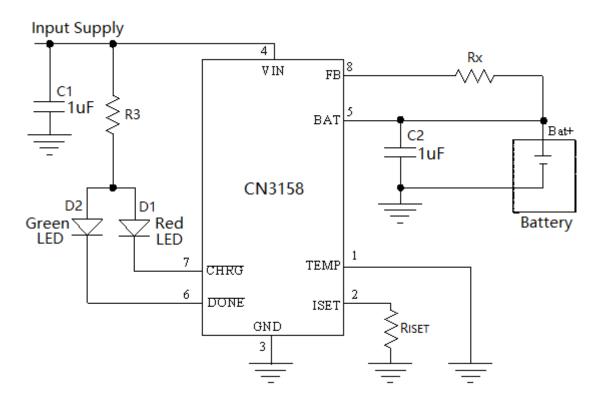


Figure 2 Application Circuit(Adjust Constant Voltage Level with Rx)

www.consonance-elec.com

In Figure 2, the BAT pin's voltage in constant voltage mode is given by the following equation:

$$V_{\rm REG} = 3.63 \pm 3.707 \times 10^{-6} \times {\rm Rx}$$

Where,  $V_{REG}$  is in volt

Rx is in ohm

## **Ordering Information:**

Part No.	Package	Shipping	<b>Operating Temperature Range</b>
CN3158	eSOP8	Tape and Reel, 4000/Reel	$-40^{\circ}$ C to $+85^{\circ}$ C

### **Block Diagram**

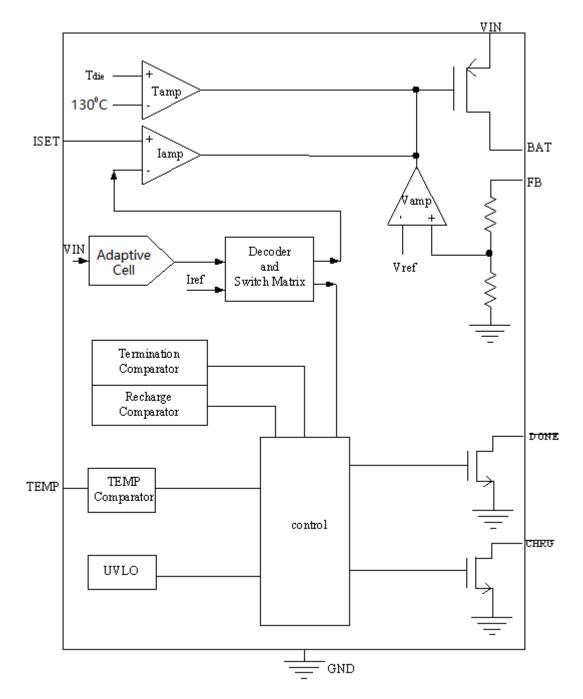


Figure 3 Block Diagram

## **Pin Description**

Pin No.	Name	Function Description	
		Temperature Sense Input. Connecting TEMP pin to NTC thermistor's	
		output in battery pack. If TEMP pin's voltage is below 45% or above 80% of	
1	TEMP	supply voltage VIN, this means that battery's temperature is too high or too	
1		low, charging is suspended. If TEMP's voltage level is between 45% and	
		80% of supply voltage, battery fault state is released, and charging will resume.	
		The temperature sense function can be disabled by grounding the TEMP pin.	
		Constant Charge Current Setting and Charge Current Monitor Pin. The	
		charge current is set by connecting a resistor R <sub>ISET</sub> from this pin to GND.	
		When in precharge mode, the ISET pin's voltage is regulated to 0.12V. When	
2	ISET	in constant charge current mode, the ISET pin's voltage is regulated to 1.205V.	
		In all modes during charging, the voltage on ISET pin can be used to measure	
		the charge current as follows:	
		$I_{CH} = (V_{ISET} / R_{ISET}) \times 986$	
3	GND	Ground Terminal (Ground).	
		<b>Positive Input Supply Voltage.</b> $V_{IN}$ is the power supply to the internal circuit.	
4	VIN	When $V_{IN}$ drops to within 10mv of the BAT pin voltage, CN3158 enters low	
		power sleep mode, dropping BAT pin's current to less than 3uA.	
	BAT	Battery Connection Pin. Connect the positive terminal of the battery to BAT	
5		pin. BAT pin draws less than 3uA current in sleep mode. BAT pin provides	
		charge current to the battery and provides regulation voltage.	
		Open-Drain Charge termination Status Output. In charge termination	
6	DONE	status, $\overline{\text{DONE}}$ is pulled low by an internal switch; Otherwise $\overline{\text{DONE}}$ pin is in	
		high impedance state.	
	CHRG	Open Drain Charge Status Output. When the battery is being charged, the	
7		CHRG pin is pulled low by an internal switch, otherwise CHRG pin is in high	
		impedance state.	
		Battery Voltage Sense Input. This Pin can sense the battery voltage; Also the	
8	FB	regulation voltage in constant voltage mode can be adjusted by connecting an	
		external resistor between FB pin and BAT pin.	

## **Absolute Maximum Ratings**

All Terminal Voltage
BAT Short-Circuit DurationContinuous
Storage Temperature
Lead Temperature(Soldering, 10s)260°C

Maximum Junction Temperature.....150  $^{\circ}$ C Operating Temperature......-40  $^{\circ}$ C to 85  $^{\circ}$ C Thermal Resistance (SOP8)......TBD

Stresses beyond those listed under 'Absolute Maximum Ratings' may cause permanent damage to the device. These are stress ratings only and functional operation of the device at these or any other conditions above those indicated in the operational sections of the specifications is not implied. Exposure to Absolute Maximum Rating Conditions for extended periods may affect device reliability.

## **Electrical Characteristics**

Parameters	Symbol	<b>Test Conditions</b>	Min	Тур	Max	Unit	
Input Supply Voltage	VIN		4.4		6	V	
Operating Current	I <sub>VIN</sub>	Charge Termination Mode	350	500	660	uA	
Undervoltage Lockout	Vuvlo	VIN falling		2.4	2.65	V	
Undervoltage Lockout Hysteresis	Huvlo			0.12		V	
Soft Start Time	t <sub>SS</sub>		100	160	220	uS	
Regulation Voltage	V <sub>REG</sub>	Constant Voltage Mode	3.595	3.63	3.665	V	
	I <sub>CC</sub>	R <sub>ISET</sub> =1.18K, V <sub>BAT</sub> =3.6V	900	1000	1100	mA	
DAT min Commont	I <sub>PRE</sub>	R <sub>ISET</sub> =1.18K, V <sub>BAT</sub> =2.4V	75 100		125		
BAT pin Current	I <sub>SDBY</sub>	V <sub>BAT</sub> =V <sub>REG</sub> , standby mode	1.8	3.7	7	A	
	I <sub>SLP</sub>	VIN=0V, sleep mode			3	uA	
Precharge Threshold							
Precharge Threshold	V <sub>PRE</sub>	Voltage at BAT pin rising	67	70	73	%V <sub>REG</sub>	
Precharge Threshold Hysteresis	H <sub>PRE</sub>			4.2		%V <sub>REG</sub>	
Charge Termination Th	reshold					I	
Charge Termination Threshold	Vterm	Measure voltage at ISET pin	96	120	144	mV	
Recharge Threshold		I					
Recharge Threshold	I <sub>RECH</sub>	Charge Current Rises		30%		%I <sub>CC</sub>	
Sleep Mode							
Sleep Mode Threshold	V <sub>SLP</sub>	$V_{IN}$ from high to low, measures the voltage ( $V_{IN}-V_{BAT}$ )	15	32	50	mV	
Sleep mode Release Threshold	V <sub>SLPR</sub>	$V_{IN}$ from low to high, measures the voltage ( $V_{IN}-V_{BAT}$ )	57	80	120	mV	
ISET Pin							
IGET D'a Maltara	<b>X</b> 7	Precharge mode		0.12		v	
ISET Pin Voltage	V <sub>ISET</sub>	Constant current mode		1.205			
TEMP PIN		·					
High Input Threshold	V <sub>HIGH</sub>	The voltage at TEMP increases	77.5	80	82.5	%V <sub>IN</sub>	
Low Input Threshold	V <sub>LOW</sub>	The voltage at TEMP decreases	42.5	45	47.5	%V <sub>IN</sub>	
TEMP input Current		TEMP to V <sub>IN</sub> or to GND			0.5	uA	
DONE Pin							
DONE Sink Current	<b>I</b> DONE	V <sub>DONE</sub> =0.3V, termination mode		10		mA	
DONE Leakage Current		V <sub>DONE</sub> =6V, charge mode			1	uA	
CHRG Pin	-		·				
CHRG Sink Current	I <sub>CHRG</sub>	V <sub>CHRG</sub> =0.3V, Charge status		10		mA	
CHRG Leakage Current		V <sub>CHRG</sub> =6V, termination mode	1		1	uA	


(VIN=5V,  $T_A = -40^{\circ}$ C to 85°C, Typical Values are measured at  $T_A = 25^{\circ}$ C, unless otherwise noted)

## **Detailed Description**

The CN3158 is a linear battery charger IC designed primarily for charging single cell LiFePO4 batteries. Featuring an internal P-channel power MOSFET, the charger uses a constant-current/constant-voltage to charge the batteries. Continuous charge current can be programmed up to 1A with an external resistor. No blocking diode or sense resistor is required. The on-chip adaptive cell can adjust charging current automatically based on the output capability of input power supply, so CN3158 is ideally suited for the solar-powered systems, or the applications that need to charge LiFePO4 battery with an input power supply whose output capability is limited. The open-drain output  $\overrightarrow{DONE}$  and  $\overrightarrow{CHRG}$  indicates the charger's status. The internal thermal regulation circuit reduces the programmed charge current if the die temperature attempts to rise above a preset value of approximately 130°C. This feature protects the CN3158 from excessive temperature, and allows the user to push the limits of the power handling capability of a given circuit board without risk of damaging the CN3158 or the external components. Another benefit of adopting thermal regulation is that charge current can be set according to typical, not worst-case, ambient temperatures for a given application with the assurance that the charger will automatically reduce the current in worst-case conditions.

The charge cycle begins when the voltage at the VIN pin rises above the UVLO level, a current set resistor is connected from the ISET pin to ground. The  $\overline{CHRG}$  pin outputs a logic low to indicate that the charge cycle is ongoing. At the beginning of the charge cycle, if the voltage at FB pin is below 70% of the regulation voltage, the charge constant-current mode to bring the cell voltage up to a safe level for charging. The charger goes into the fast charge constant-current mode once the voltage on the FB pin rises above 70% of the regulation voltage. In constant current mode, the charge current is set by  $R_{ISET}$ . When the battery approaches the regulation voltage, the charge current begins to decrease as the CN3158 enters the constant-voltage mode. When the current drops to charge termination threshold, the charge cycle is terminated,  $\overline{DONE}$  is pulled low by an internal switch and  $\overline{CHRG}$  pin assumes a high impedance state to indicate that the charge cycle is terminated. The charge termination threshold is 10% of the current in constant current mode. To restart the charge cycle, just remove the input voltage and reapply it. The charge cycle can also be automatically restarted if the charge current rises above the recharge threshold. The on-chip reference voltage, error amplifier and the resistor divider provide regulation voltage is not present, the charger goes into a sleep mode, dropping battery drain current to less than 3uA. This greatly reduces the current drain on the battery and increases the standby time.

The charging profile is shown in the following figure:

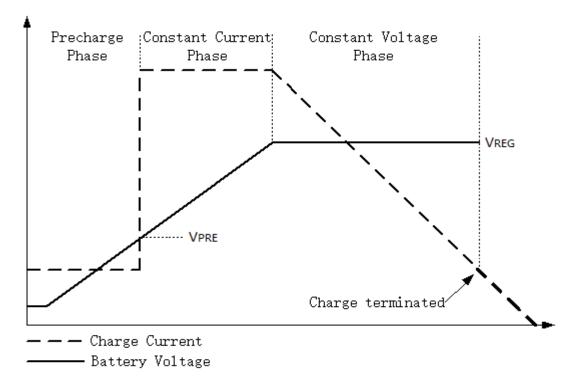

### Figure 4 Charging Profile

### **Application Information**

#### Undervoltage Lockout (UVLO)

An internal undervoltage lockout circuit monitors the input voltage and keeps the charger in shutdown mode until VIN rises above the undervoltage lockout voltage. The UVLO circuit has a built-in hysteresis of 0.12V.

#### Sleep mode

There is an on-chip sleep comparator. The comparator keeps the charger in sleep mode if VIN falls below sleep mode threshold. Once in sleep mode, the charger will not come out of sleep mode until VIN rises above the sleep mode release threshold.

#### Precharge mode


At the beginning of a charge cycle, if the battery voltage is below 70% of the regulation voltage, the charger goes into precharge mode, and the charge current is 10% of fast charge current in constant current mode.

#### Charging Current limited by the Output capability of Input Power Supply

If the output capability of input power supply is less than the charging current set by the resistor at ISET pin, then the on-chip adaptive cell will begin to function to adjust the charging current based on the output capability of input power supply. In this case, the charging current may be less than the value set by the resistor at ISET pin, but it is maximized to the output capability of input power supply on the condition that the input voltage at VIN pin is no less than 4.4V, which is the minimum operating voltage of CN3158. So the charging current can be set according to the maximum output capability of input power supply, not the worst case.

#### Adjusting the regulation voltage in constant voltage mode

The regulation voltage in constant voltage mode can be adjusted by an external resistor connecting between FB pin and BAT pin as shown in Figure 5:

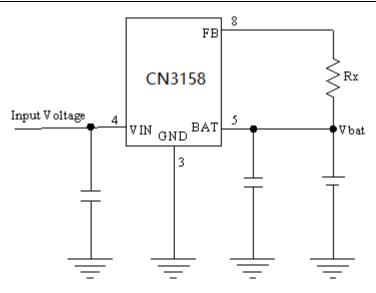

### Figure 5 Adjusting Regulation Voltage in Constant Voltage Mode

In Figure 5, the regulation voltage in constant voltage mode will be given by the following equation:

 $V_{REG} = 3.63 + 3.707 \times 10^{-6} \times Rx$ 

Where,

V<sub>REG</sub> is in volt Rx is in ohm

#### **Setting Charge Current**

The formula for the battery charge current in constant current mode is:

 $I_{CH} = 1188V / R_{ISET}$ 

Where:

I<sub>CH</sub> is the charge current in ampere

 $R_{\mbox{\scriptsize ISET}}$  is the total resistance from the  $\mbox{\scriptsize ISET}$  pin to ground in ohm

For example, if 1000mA charge current is required, calculate:


 $R_{ISET} = 1188V/1A = 1.18k\,\Omega$ 

For best stability over temperature and time, 1% metal film resistors are recommended. If the charger is in constant-temperature or constant voltage mode, the charge current can be monitored by measuring the ISET pin voltage, and the charge current is calculated as the following equation:

 $I_{CH} = (V_{ISET} / R_{ISET}) \times 986$ 

#### **Combine Two Power Inputs**

Although the CN3158 allows charging from a solar power supply, a wall adapter or a USB port can also be used to charge LiFePO4 batteries. Figure 6 shows an example of how to combine 2 power inputs. A P-channel MOSFET, M1, is used to prevent back conducting into the  $2^{nd}$  power supply when the  $1^{st}$  power supply is present and Schottky diode, D1, is used to prevent  $2^{nd}$  power supply loss through the  $1k \Omega$  pull-down resistor.

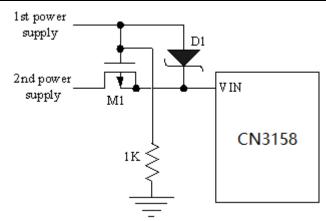

### Figure 6 Combining 2 Input Power Supply

### **Battery Temperature Sense**

To prevent the damage caused by the very high or very low temperature done to the battery pack, the CN3158 continuously senses battery pack temperature by measuring the voltage at TEMP pin determined by the voltage divider circuit and the battery's internal NTC thermistor as shown in Figure 7.

The CN3158 compares the voltage at TEMP pin ( $V_{TEMP}$ ) against its internal  $V_{LOW}$  and  $V_{HIGH}$  thresholds to determine if charging is allowed. In CN3158,  $V_{LOW}$  is fixed at (45% × VIN), while  $V_{HIGH}$  is fixed at (80% × VIN). If  $V_{TEMP} < V_{LOW}$  or  $V_{TEMP} > V_{HIGH}$ , it indicates that the battery temperature is too high or too low and the charge cycle is suspended. When  $V_{TEMP}$  is between  $V_{LOW}$  and  $V_{HIGH}$ , the charge cycle resumes. The battery temperature sense function can be disabled by connecting TEMP pin to GND.

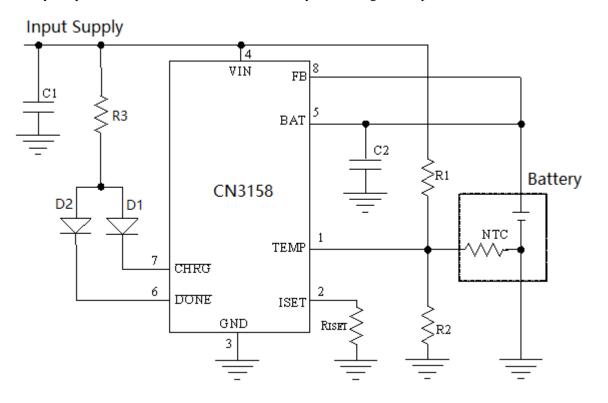


Figure 7 Monitoring Battery Temperature

#### Selecting R1 and R2

The values of R1 and R2 in Figure 7 can be determined according to the assumed temperature monitor range and thermistor's values. The Follows is an example:

Assume temperature monitor range is  $T_L \sim T_H$  ( $T_L < T_H =$ ; the thermistor in battery has negative temperature coefficient (NTC),  $R_{TL}$  is thermistor's resistance at  $T_L$ ,  $R_{TH}$  is the resistance at  $T_H$ , so  $R_{TL} > R_{TH}$ , then at temperature  $T_L$ , the voltage at TEMP pin is:

$$V_{\text{TEMPL}} = \frac{R2 ||\mathbf{R}_{\text{TL}}|}{R1 + R2 ||R_{\text{TL}}|} \times VIN$$

At temperature  $T_H$ , the voltage at TEMP pin is:

$$V_{\text{TEMPH}} = \frac{R2 ||RTH}{R1 + R2 ||RTH} \times VIN$$

We know,  $V_{\text{TEMPL}} = V_{\text{HIGH}} = k_2 \times \text{VIN}$  (k<sub>2</sub>=0.8)

$$V_{\text{TEMPH}} = V_{\text{LOW}} = k_1 \times \text{VIN} (k_1 = 0.45)$$

Then we can have:

$$R1 = \frac{R_{TL}R_{TH}(k_2 - k_1)}{(R_{TL} - R_{TH})k_1k_2}$$
$$R2 = \frac{R_{TL}R_{TH}(k_2 - k_1)}{R_{TL}(k_1 - k_1k_2) - R_{TH}(k_2 - k_1k_2)}$$

Likewise, for positive temperature coefficient thermistor in battery, we have  $R_{TH} > R_{TL}$  and we can calculate:

$$R1 = \frac{R_{TL}R_{TH}(k_2 - k_1)}{(R_{TH} - R_{TL})k_1k_2}$$
$$R2 = \frac{R_{TL}R_{TH}(k_2 - k_1)}{R_{TH}(k_1 - k_1k_2) - R_{TL}(k_2 - k_1k_2)}$$

We can conclude that temperature monitor range is independent of power supply voltage VIN and it only depends on R1, R2,  $R_{TL}$  and  $R_{TH}$ . The values of  $R_{TH}$  and  $R_{TL}$  can be found in related battery handbook or deduced from testing data.

In actual application, if only one terminal temperature is concerned(normally protecting overheating), there is no need to use R2 but R1. In this case it becomes very simple to calculate R1.

#### Recharge

After a charge cycle has terminated, if the charge current rises above 30% of the constant charge current, a new charge cycle will begin automatically.

#### Constant-Current/Constant-Voltage/Constant-Temperature

The CN3158 use a unique architecture to charge a battery in a constant-current, constant-voltage, constant temperature fashion as shown in Figure 3. Amplifiers Iamp, Vamp, and Tamp are used in three separate feedback loops to force the charger into constant-current, constant-voltage, or constant-temperature mode, respectively. In constant current mode the charge current delivered to the battery equal to 1188V/R<sub>ISET</sub>. If the power dissipation of the CN3158 results in the junction temperature approaching 130°C, the amplifier Tamp will begin decreasing the charge current to limit the die temperature to approximately 130°C. As the battery voltage rises, the CN3158 either returns to constant-current mode or it enters constant voltage mode straight from constant-temperature mode.

### **Open-Drain Status Outputs**

The CN3158 have 2 open-drain status outputs:  $\overline{\text{DONE}}$  and  $\overline{\text{CHRG}}$ .  $\overline{\text{CHRG}}$  is pulled low when the charger is in charging status, otherwise  $\overline{\text{CHRG}}$  becomes high impedance.  $\overline{\text{DONE}}$  is pulled low if the charger is in charge termination status, otherwise  $\overline{\text{DONE}}$  becomes high impedance.

The open drain status output that is not used should be tied to ground.

### **VIN Bypass Capacitor**

Many types of capacitors can be used for input bypassing(C1 in Figure 1 and 2), Generally, a 1uF ceramic capacitor, placed in close proximity to VIN and GND pins, works well. In some applications depending on the power supply characteristics and cable length, it may be necessary to increase the capacitor's value.

If the ceramic capacitor is used as the input supply bypassing purpose, a voltage spike may be created when the input voltage is applied to the CN3158 via a cable. If the cable is a bit long, the circuit shown in Figure 6 or a TVS diode from VIN pin to GND should be considered to use to prevent the CN3158 from being damaged by the voltage spike.

For the consideration of the bypass capacitor, please refer to the Application Note AN102 from our website.

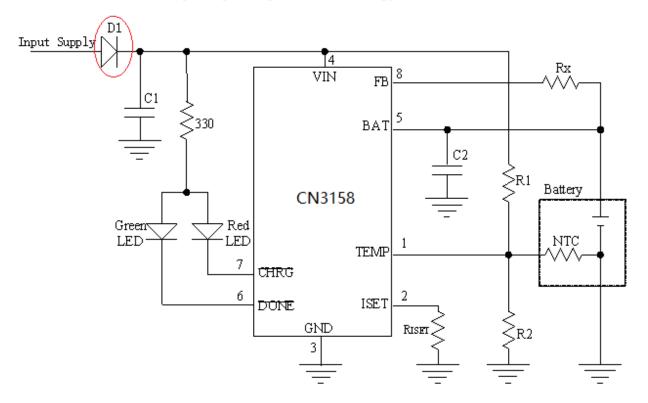


Figure 6 Adding Diode D1 to Suppress Voltage Spike

### Stability

A capacitor from BAT pin to GND is required to stabilize the feedback loop, generally the feedback loop is stable with an 1uF to 22uF ceramic capacitor. If electrolytic capacitor is used, the capacitance can be as high as 100uF.

In constant current mode, the stability is also affected by the impedance at the ISET pin . With no additional capacitance on the ISET pin, the loop is stable with current set resistors values as high as 50K  $\Omega$ . However, additional capacitance on ISET pin reduces the maximum allowed current set resistor. The pole frequency at ISET pin should be kept above 200KHz. Therefore, if ISET pin is loaded with a capacitance C, the following equation should be used to calculate the maximum resistance value for R<sub>ISET</sub>:


$$R_{ISET} < 1 / (6.28 \times 2 \times 10^5 \times C)$$


#### **Board Layout Considerations**


- 1. R<sub>ISET</sub> at ISET pin should be as close to CN3158 as possible, also the parasitic capacitance at ISET pin should be kept as small as possible.
- 2. The capacitance at VIN pin and BAT pin should be as close to CN3158 as possible.
- 3. During charging, CN3158's temperature may be high, the NTC thermistor should be placed far enough to CN3158 so that the thermistor can reflect the battery's temperature correctly.
- 4. It is very important to use a good thermal PC board layout to maximize charging current. The thermal path for the heat generated by the IC is from the die to the copper lead frame through the package lead(especially the ground lead) to the PC board copper, the PC board copper is the heat sink. The footprint copper pads should be as wide as possible and expand out to larger copper areas to spread and dissipate the heat to the surrounding ambient. Feedthrough vias to inner or backside copper layers are also useful in improving the overall thermal performance of the charger. Other heat sources on the board, not related to the charger, must also be considered when designing a PC board layout because they will affect overall temperature rise and the maximum charge current.

The ability to deliver maximum charge current under all conditions require that the exposed metal pad on the back side of the CN3158 package be soldered to the PC board ground. Failure to make the thermal contact between the exposed pad on the backside of the package and the copper board will result in larger thermal resistance.

## **Package Information**

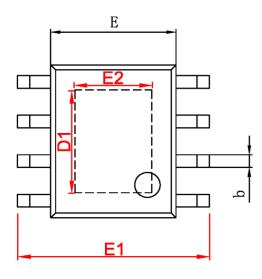

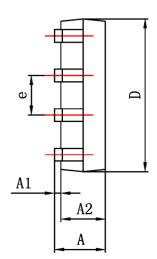

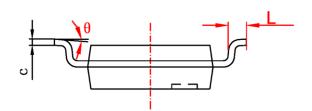

古林	Dimensions Ir	n Millimeters	Dimensions In Inches		
字符	Min	Max	Min	Max	
A	1. 350	1. 750	0. 053	0.069	
A1	0. 050	0. 150	0. 004	0. 010	
A2	1. 350	1. 550	0. 053	0. 061	
b	0. 330	0. 510	0. 013	0. 020	
с	0. 170	0. 250	0. 006	0.010	
D	4. 700	5. 100	0. 185	0. 200	
D1	3. 202	3. 402	0. 126	0.134	
E	3. 800	4. 000	0. 150	0. 157	
E1	5. 800	6. 200	0. 228	0. 244	
E2	2. 313	2. 513	0. 091	0. 099	
е	1. 270 (BSC)		0. 050 (BSC)		
L	0. 400	1. 270	0. 016	0. 050	
θ	0 °	8 °	<b>0</b> °	8°	

Consonance does not assume any responsibility for use of any circuitry described. Consonance reserves the right to change the circuitry and specifications without notice at any time.